HO Scale 1:87

2190 Wigwag Signal

Drill Through
With 1/32" Bit

Paint Target Center
With RED paint.
Then fill cavity
with gloss medium
(Kristal Klear)

Photo Etch
Target

Part #1

Look for
notches.

Part #2

Test fit part #2.
It should slide
in place at the
correct angle.

Stirrups are
optional.

BEFORE APPLYING GLUE
Slide all parts in place in their correct order.

1.38"

After all parts have been slid ***in correct order*** down the mast,
Glue **Part #1** in place at the top of the mast.
Next - glue the end of **Part #2** into the notches of **Part #1**.

Cabinet may be open with separate doors or one solid part.

Stainless Steel Etch Parts.
Paint white then apply decals.

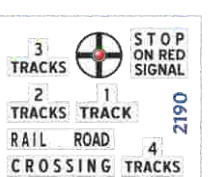

WATERSLIDE DECALS:

WATERSLIDE DECALS ARE NOT PRE-CUT AND MUST BE CUT AS CLOSE TO THE EDGE OF THE GRAPHIC AS POSSIBLE. SOAK 30-45 SECONDS, FACE UP, FLOATING ON SURFACE OF ROOM TEMP. WATER.
SLIDE THE DECAL OFF THE BACKING PAPER ONTO THE SURFACE OF THE PART

Visit our painting and
finishing tips on our website